

FIG. 1

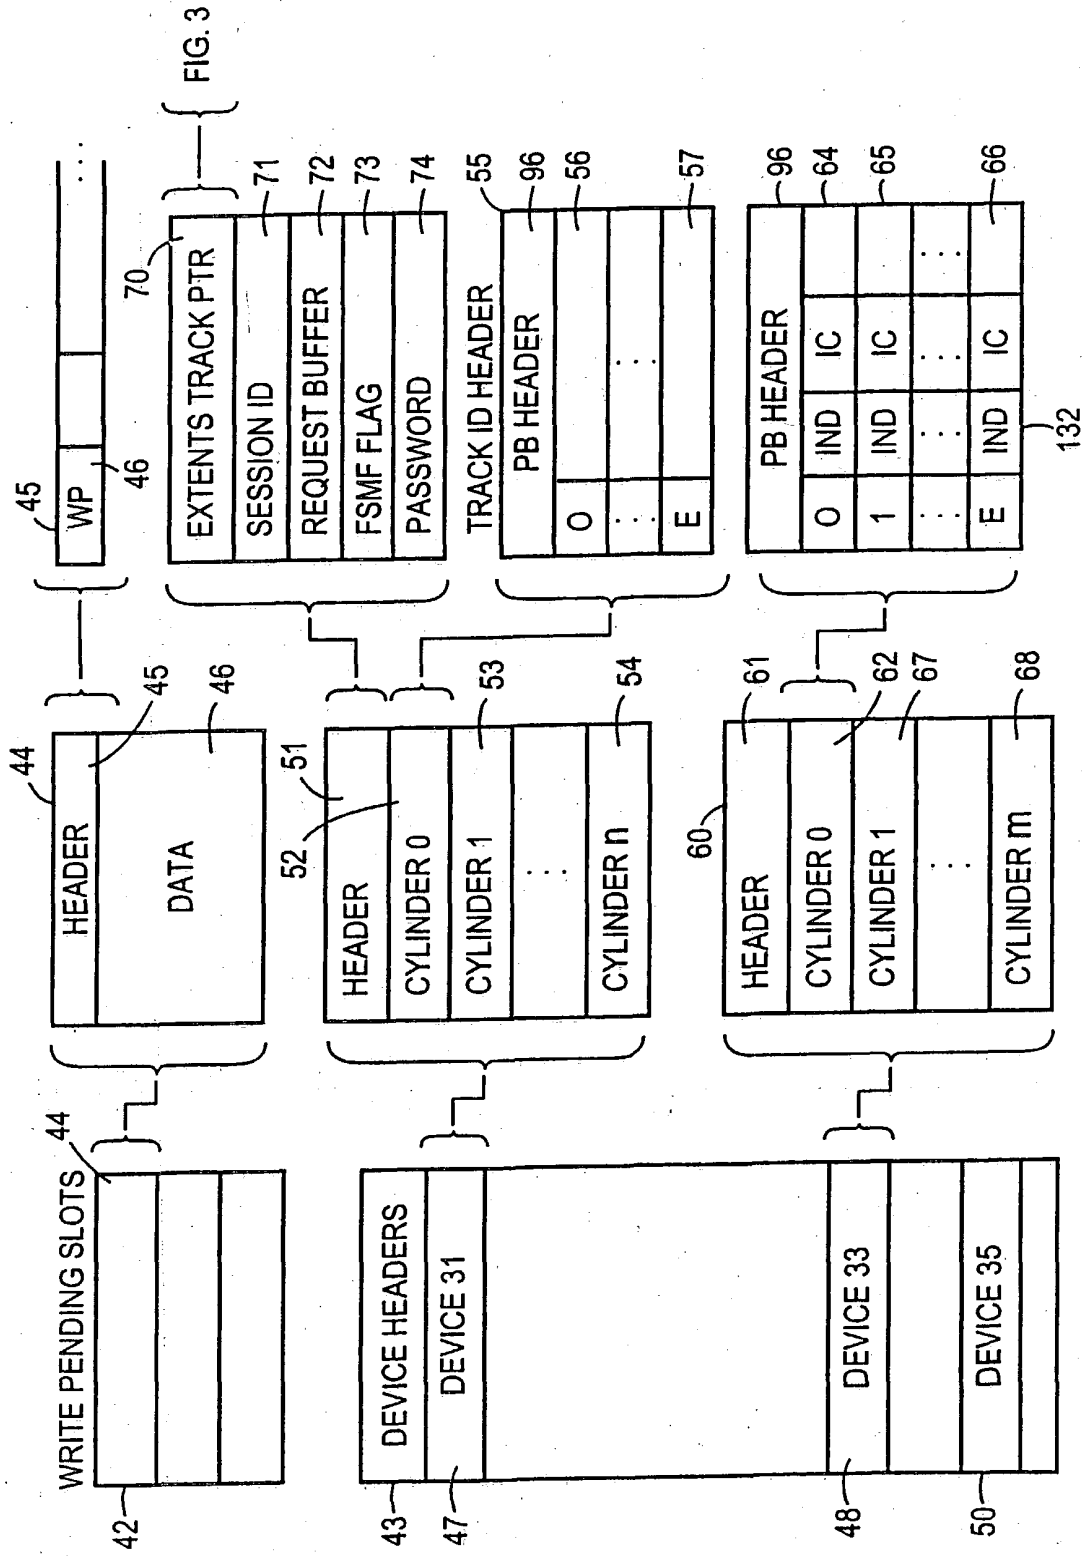


FIG. 2

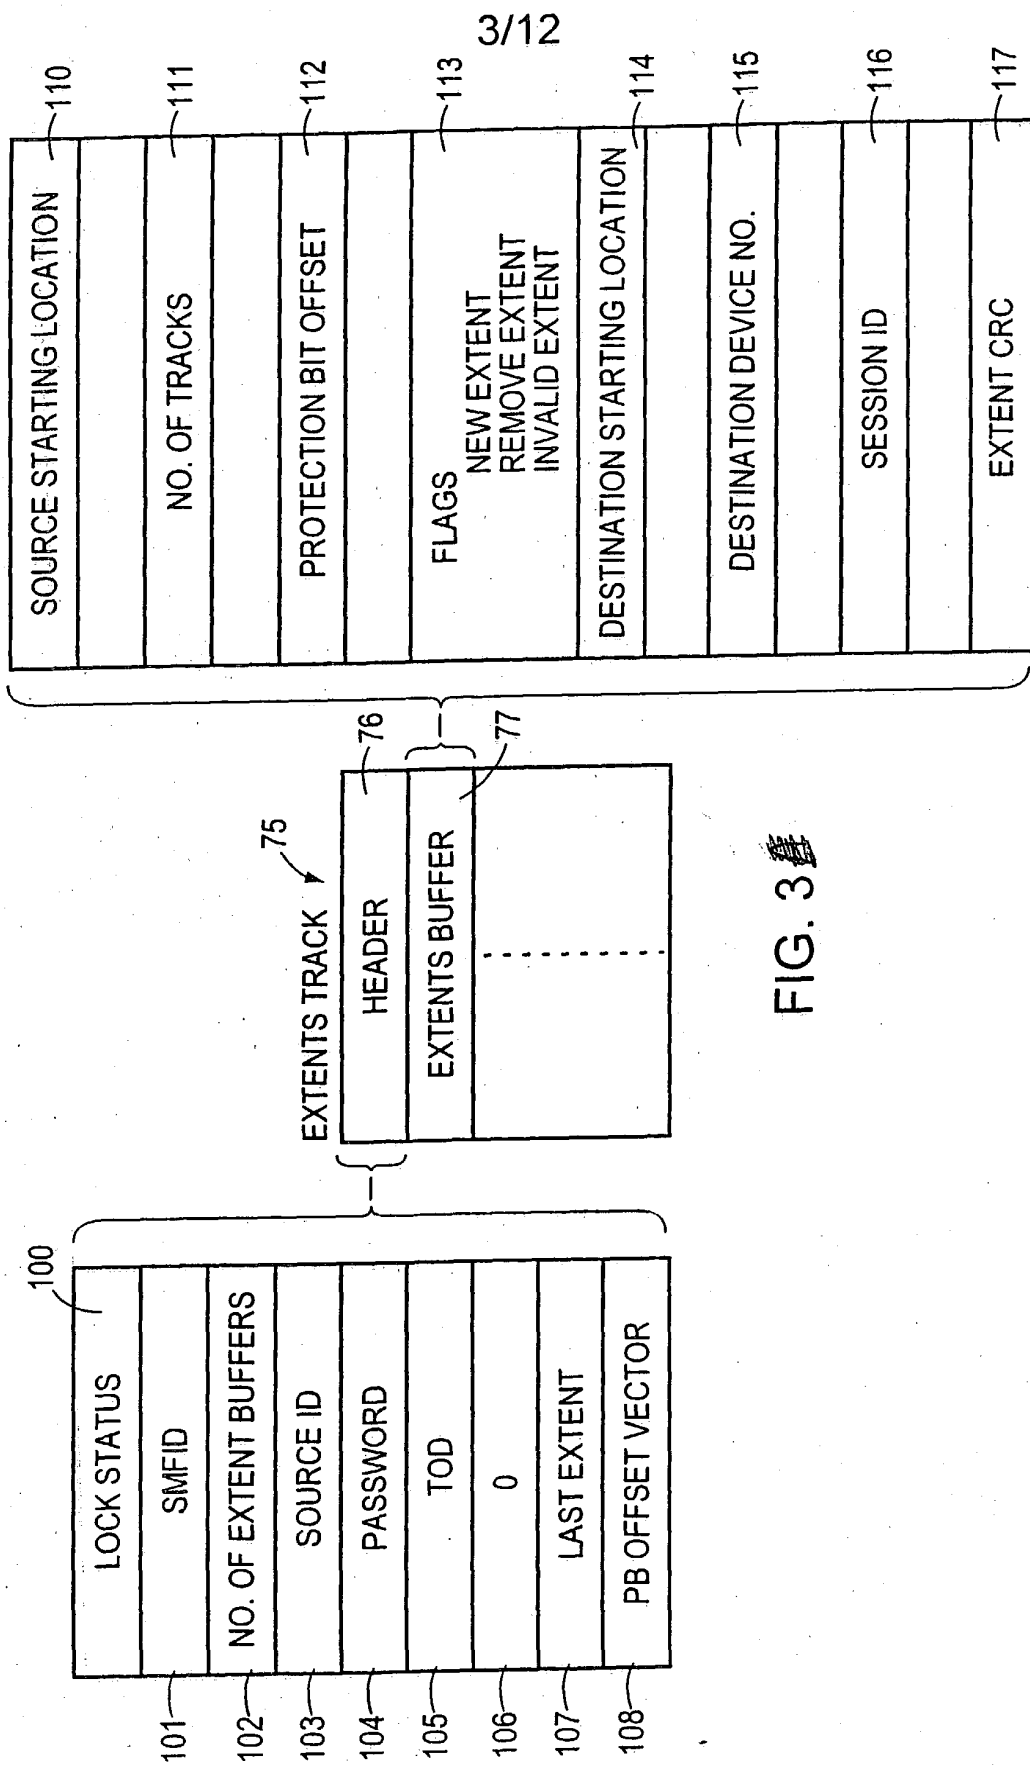


FIG. 3

	CALL FROM DESTINATION DEVICE	CALL FROM SOURCE DEVICE
81	SOURCE DEVICE NUMBER	DESTINATION DEVICE NUMBER
82	RECORD NUMBER OF STARTING EXTENT	CYLINDER ADDRESS OF DESTINATION DEVICE
83	RECORD NUMBER OF ENDING EXTENT	HEAD IDENTIFIER OF DESTINATION DEVICE

FIG. 4

REQUESTING HOST
APPLICATION

DATA STORAGE FACILITY 24

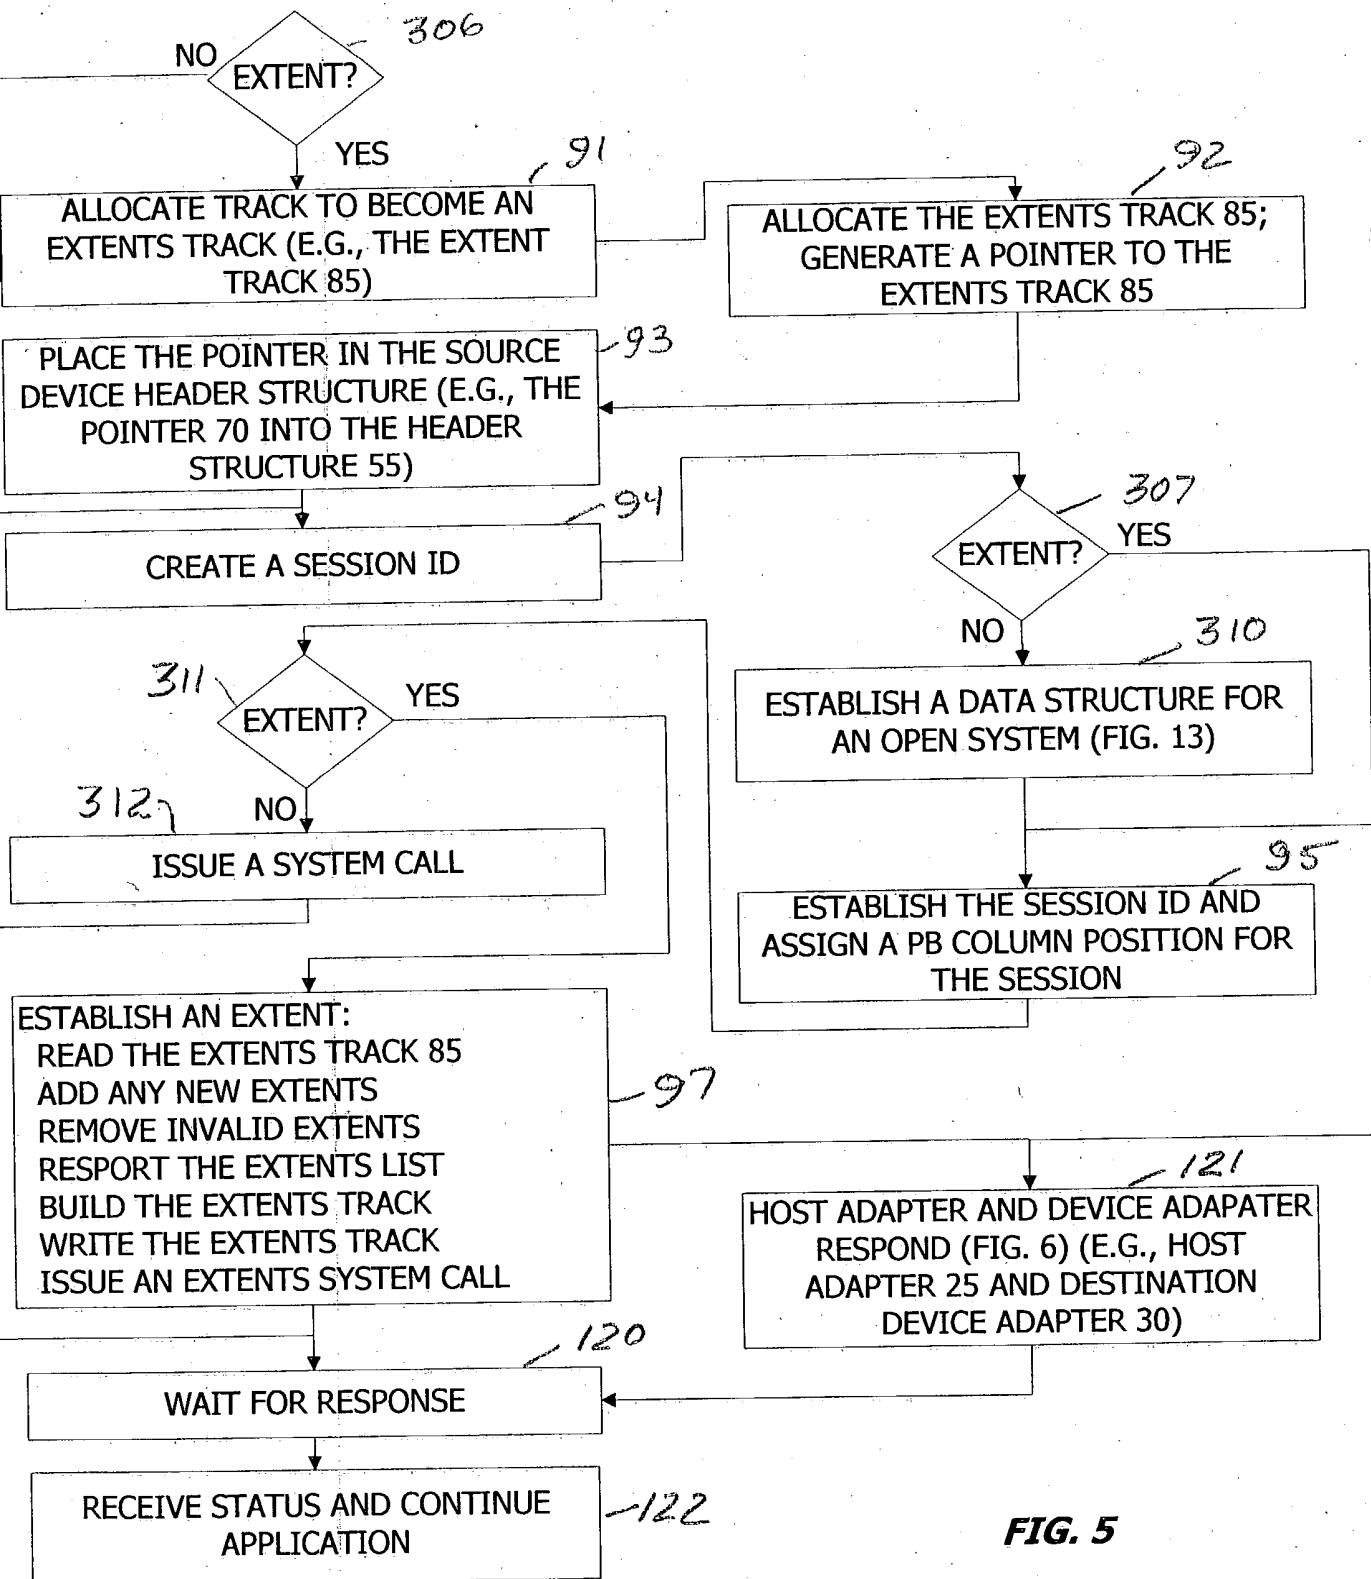


FIG. 5

6/12

HA CONTROLLER 86

DA CONTROLLER 88

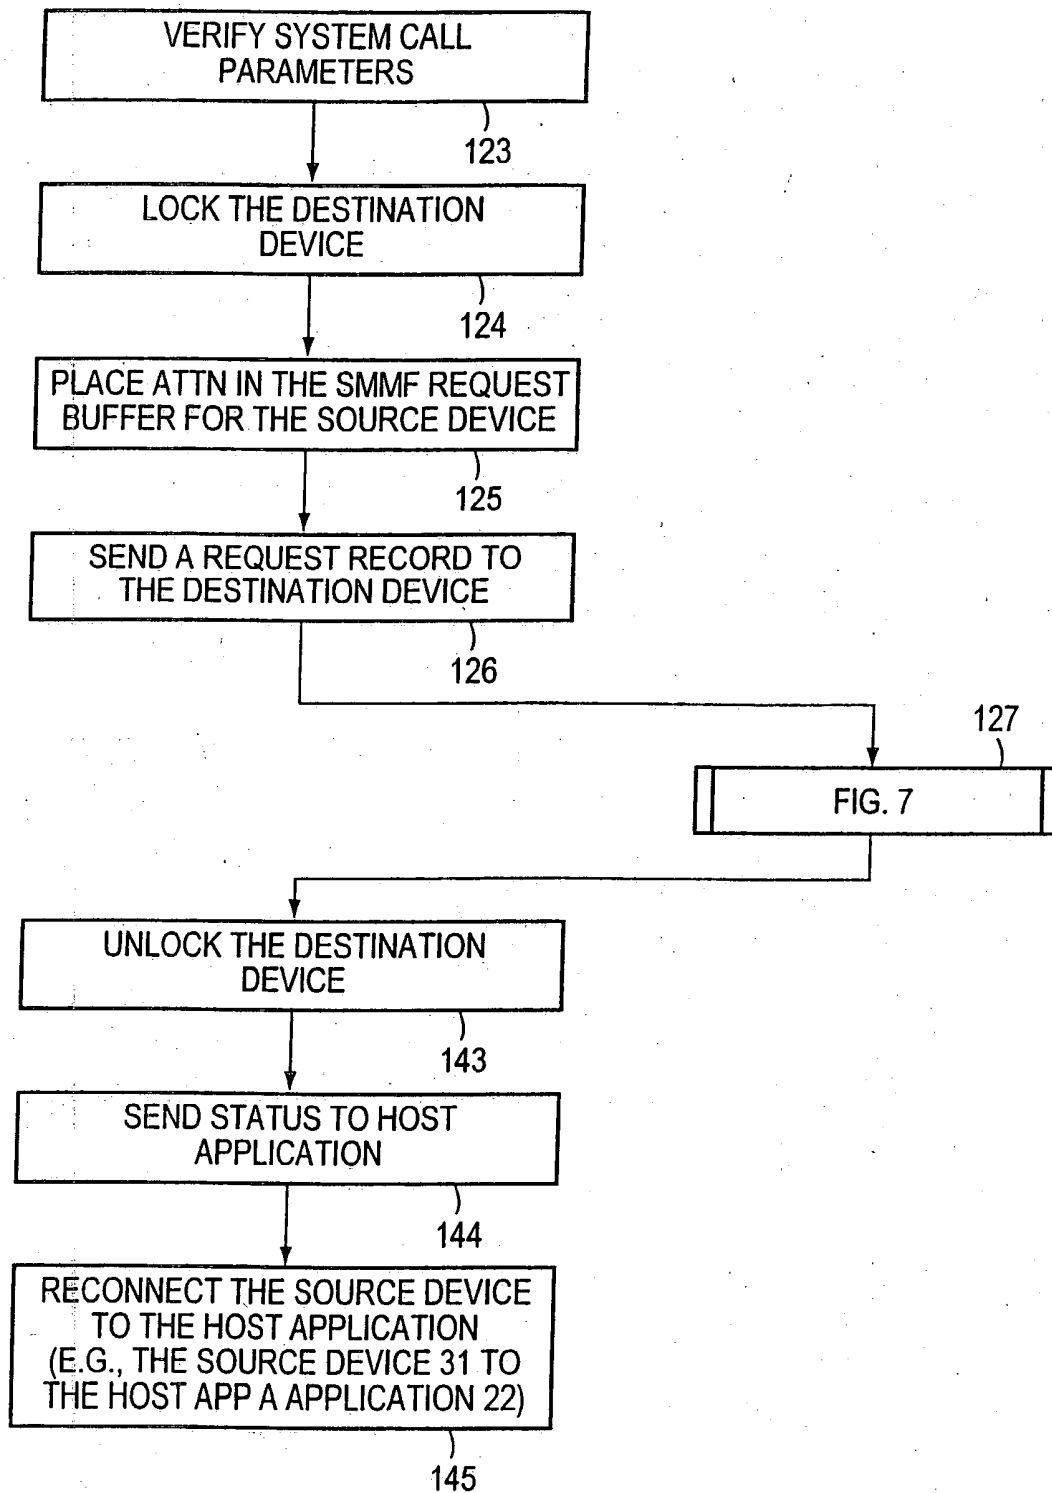


FIG. 6

127 ↘

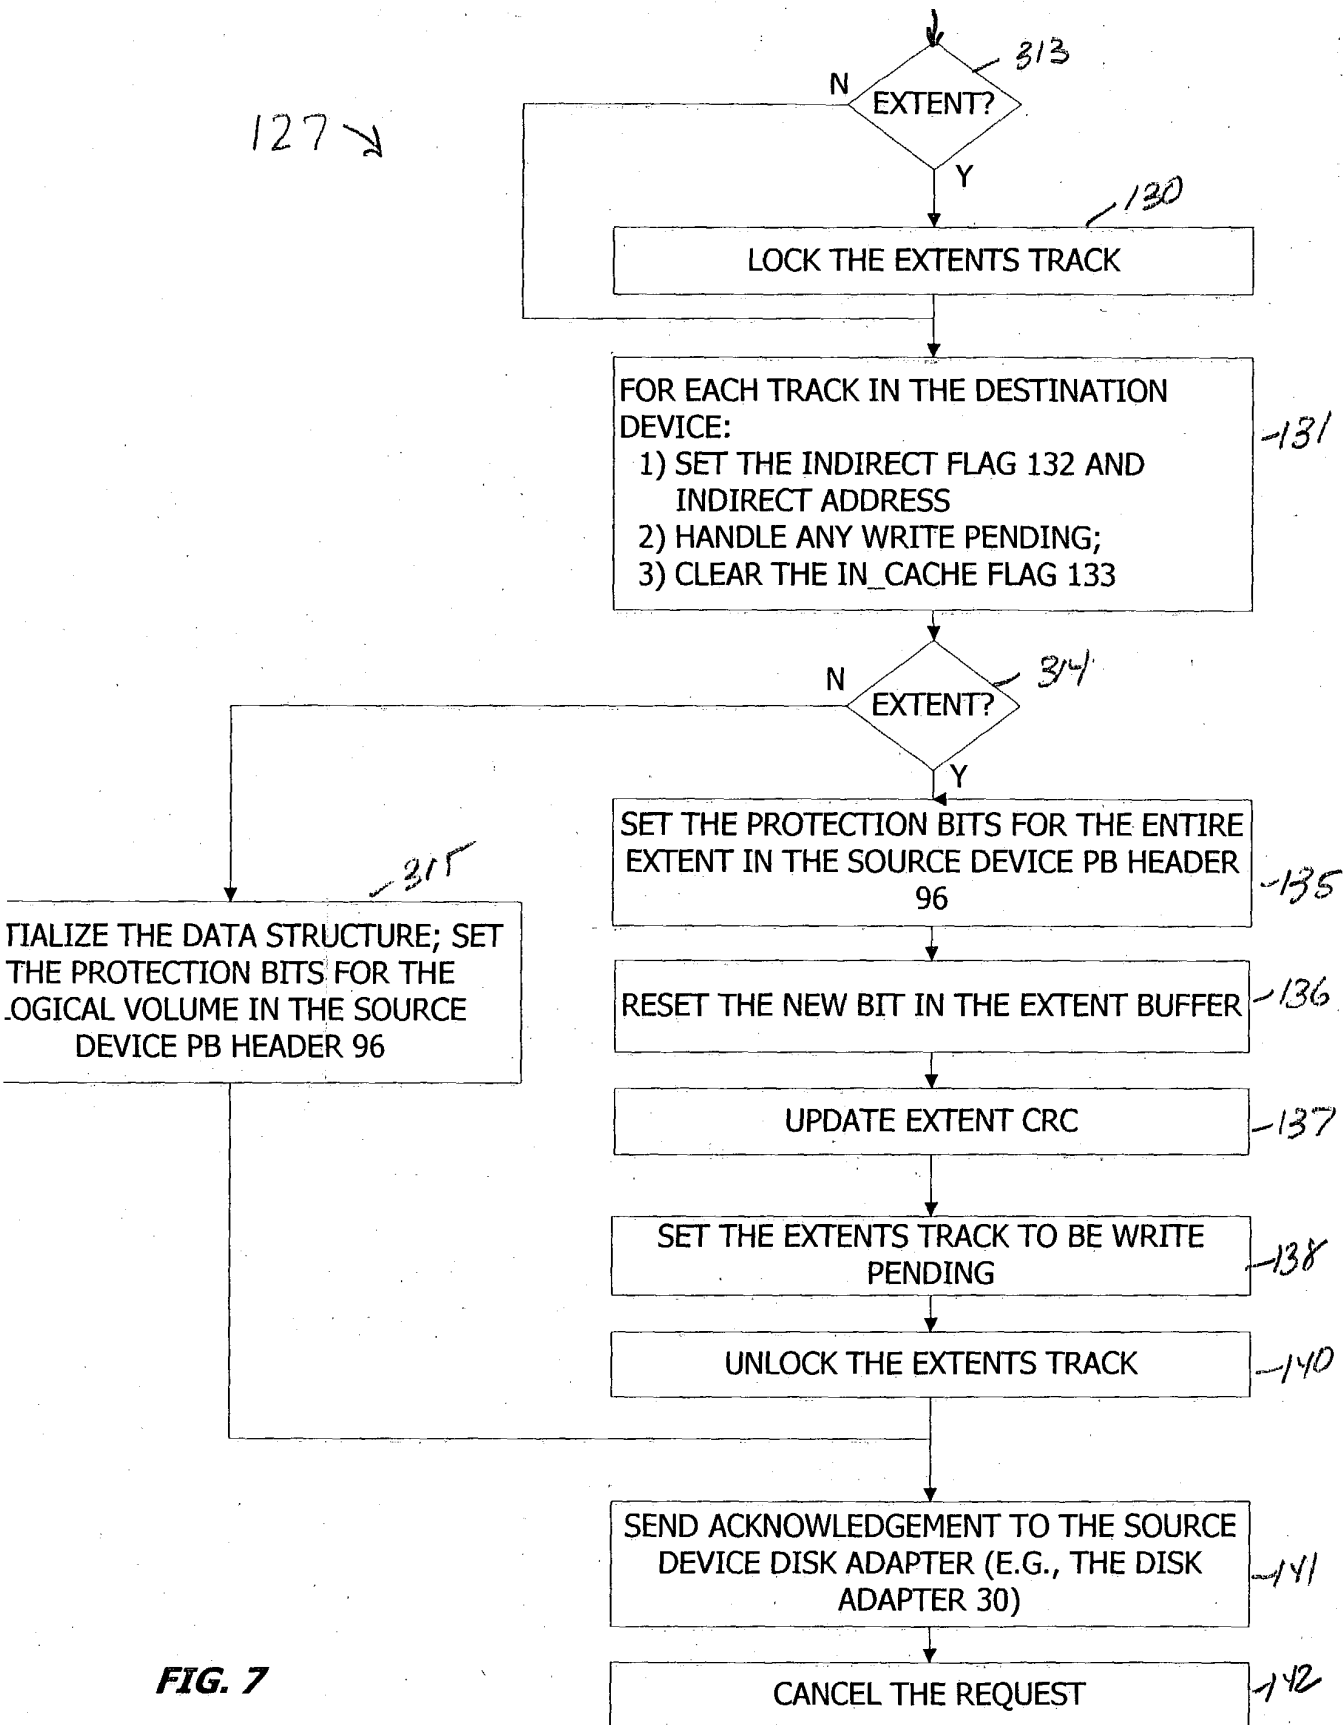


FIG. 7

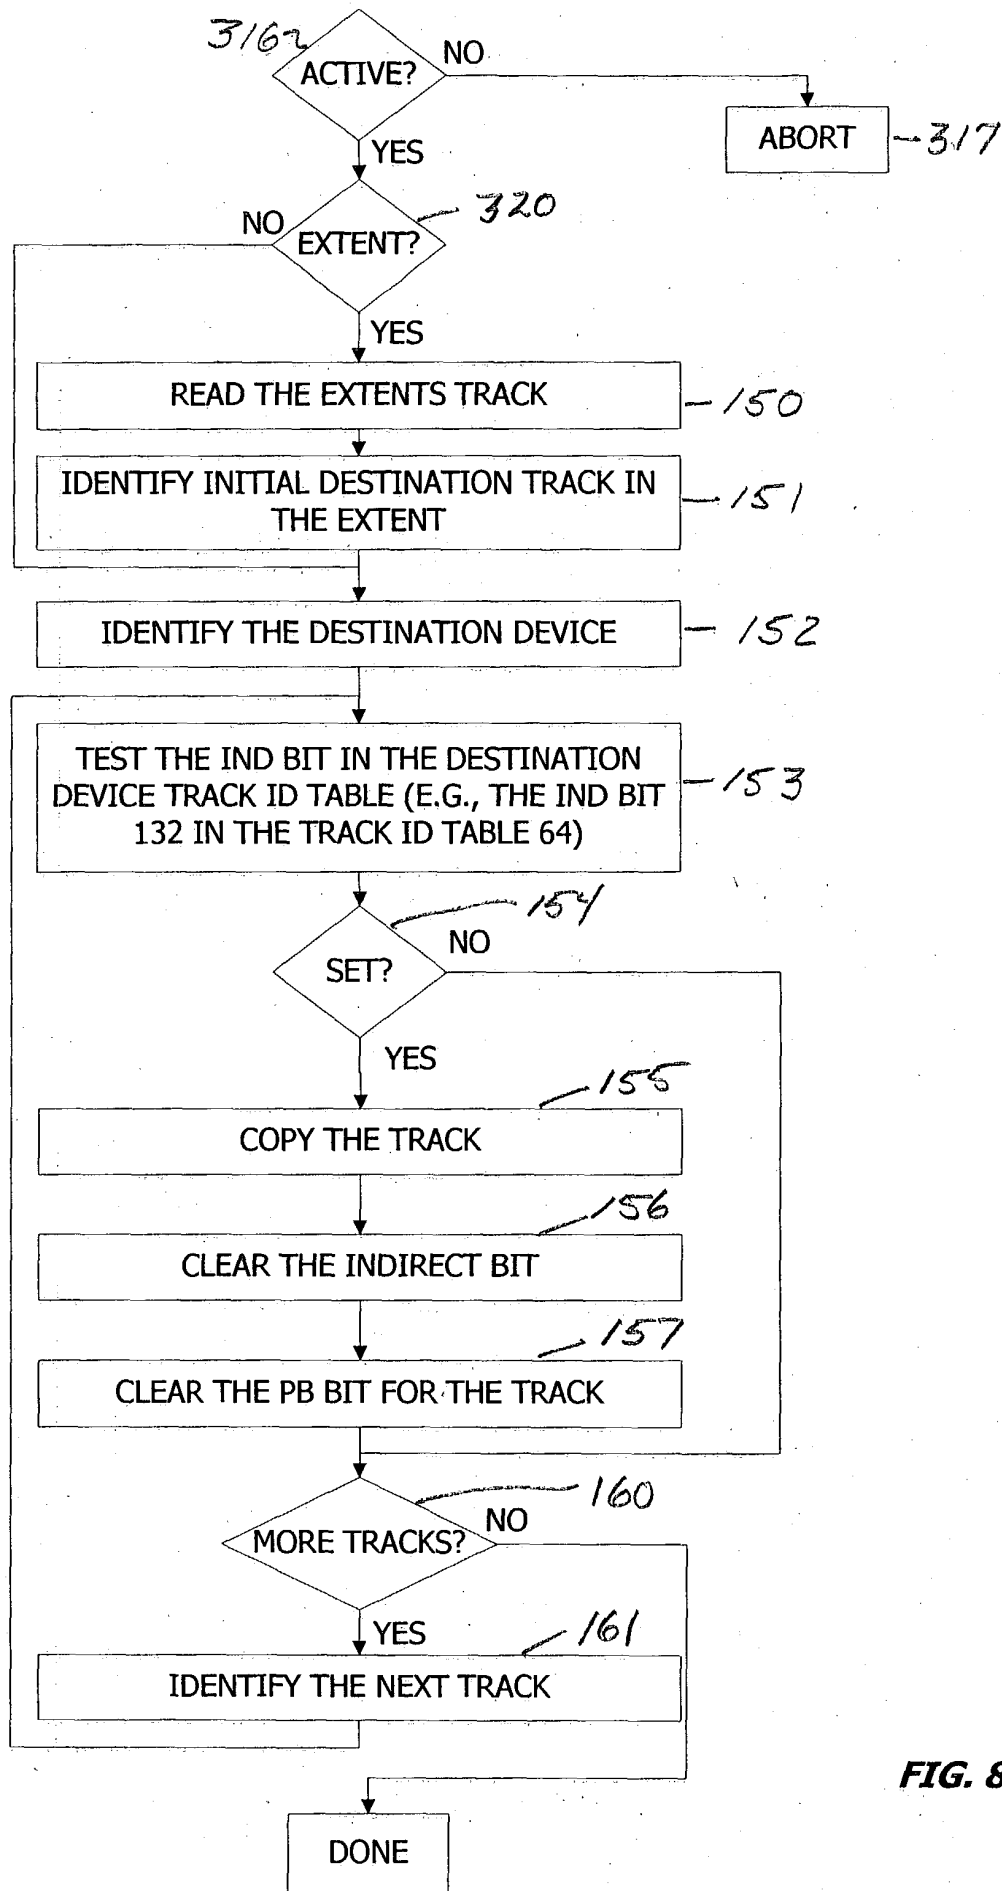


FIG. 8

WRITE
OPERATION
FROM SOURCE
HOST

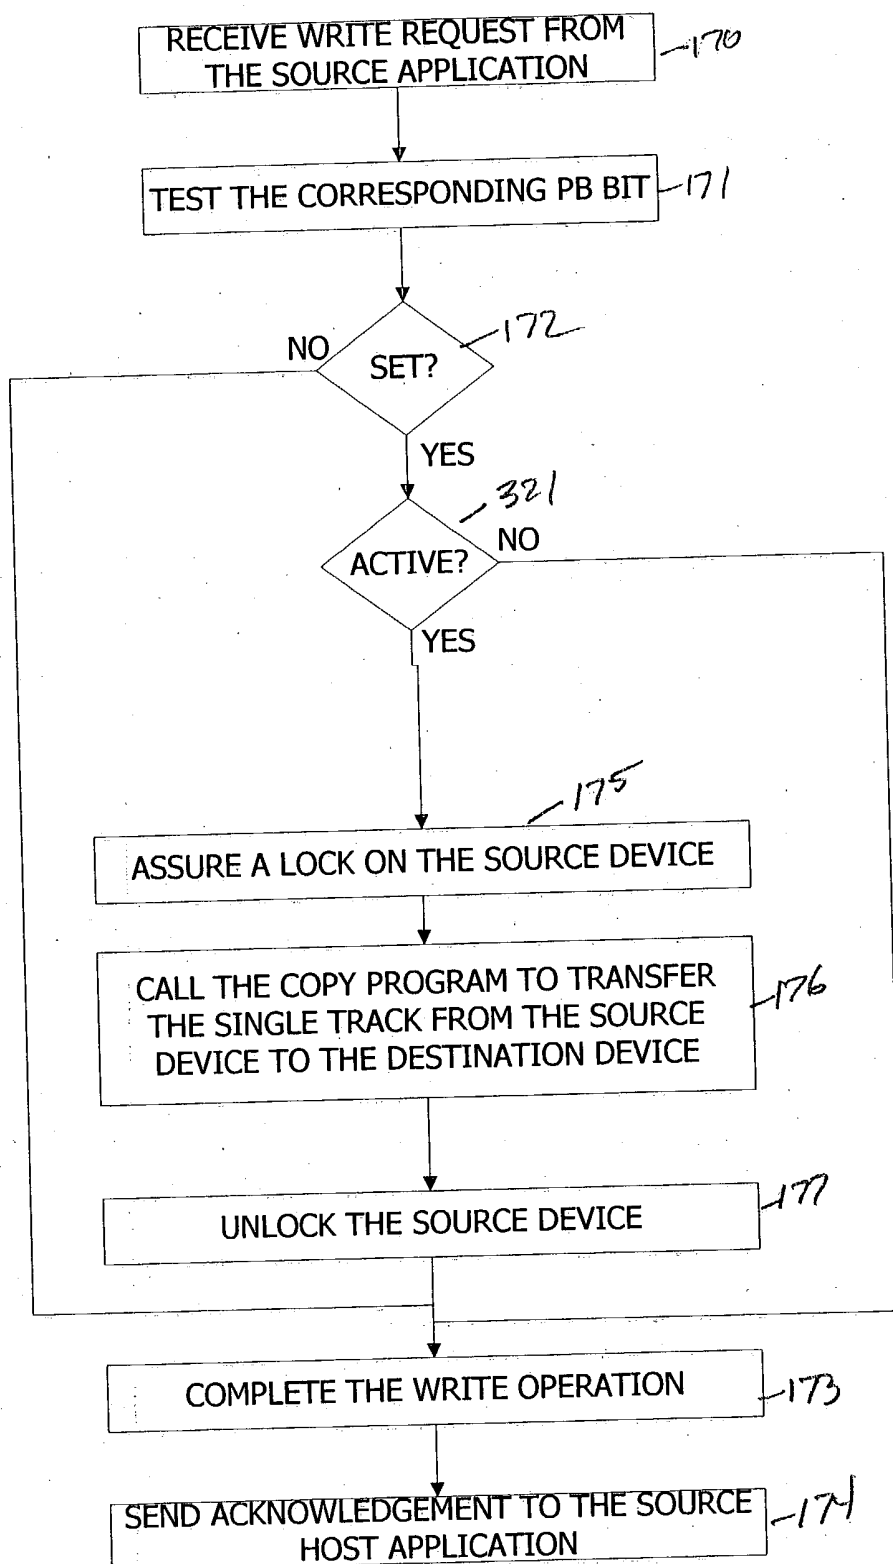


FIG. 9

READ OR WRITE
OPERATION FROM
DESTINATION HOST

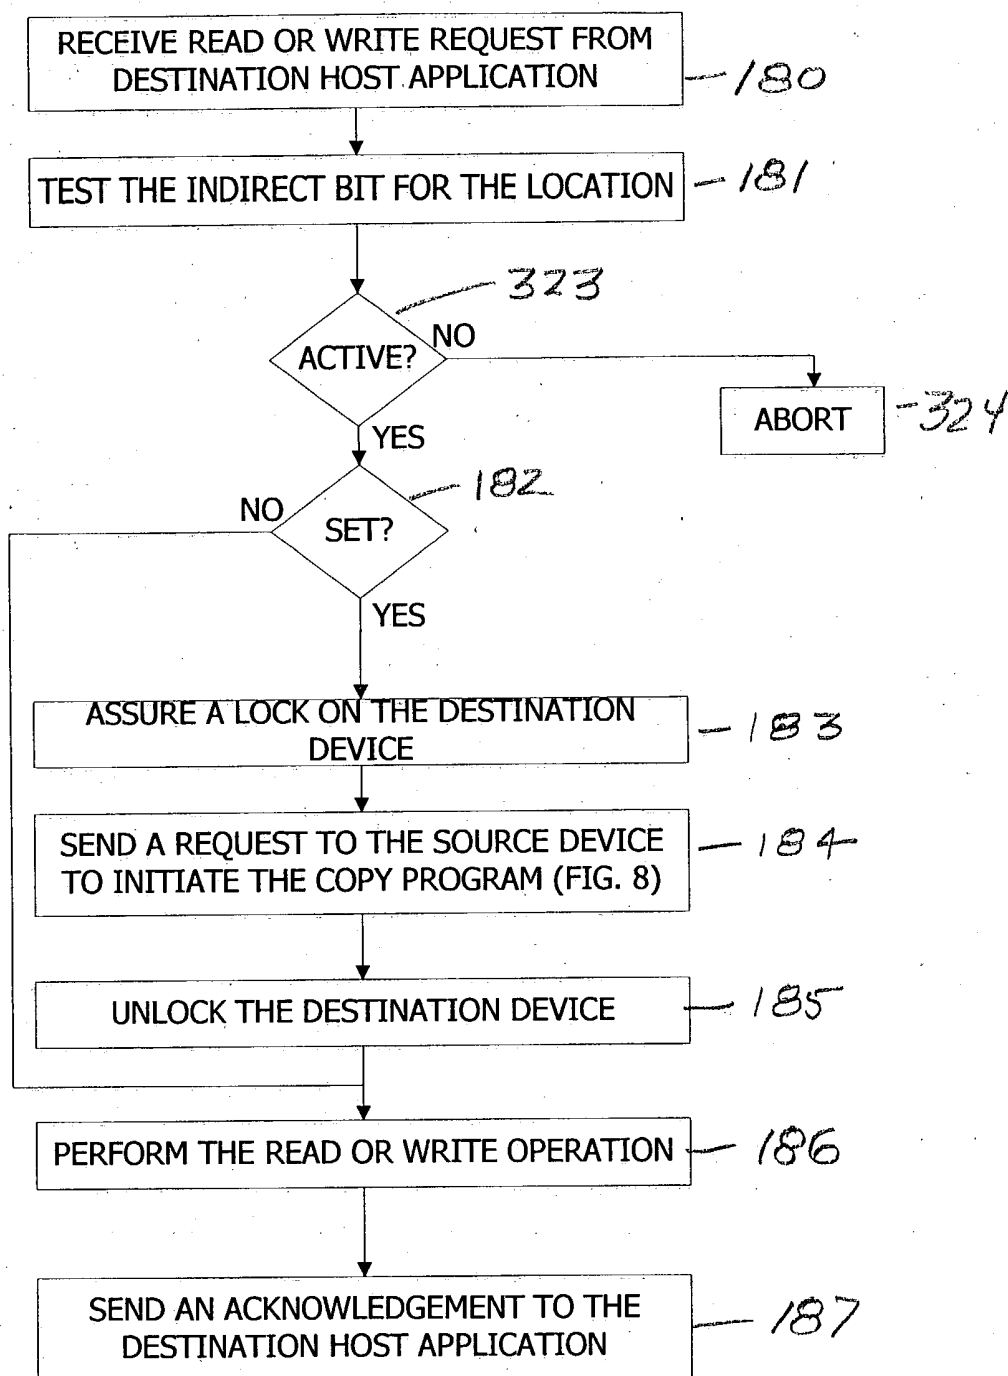


FIG. 10

REQUESTING HOST APPLICATION

NO
EXTENT?

YES

READ THE EXTENTS TRACK (E.G., THE
EXTENTS TRACK 75)SET APPROPRIATE REMOVE EXTENT
FLAGS (E.G., THE REMOVE EXTENTS
FLAG IN THE FLAGS FIELD 113)WRITE THE EXTENTS TRACK TO THE
CACHE MEMORY 27 IN THE DATA
STORAGE FACILITY 24

ISSUE A REMOVE EXTENTS SYSTEM CALL

WAIT FOR RESPONSE

READ THE EXTENTS TRACK

DELETE ALL TERMINATED EXTENTS

RESORT THE EXTENTS LIST

WRITE THE EXTENTS TRACK TO THE
CACHE MEMORY 27 IN THE DATA
STORAGE FACILITY 24

COMPLETE?

NO

YES

ISSUE AS REMOVE SESSION ID SYSTEM
CALL

DONE

HOST ADAPTER AND DESTINATION
DEVICE ADAPTER (E.G., HOST ADAPTER
25 AND DESTINATION DEVICE ADAPTER
32) RESPOND (FIG. 12)

FIG.11

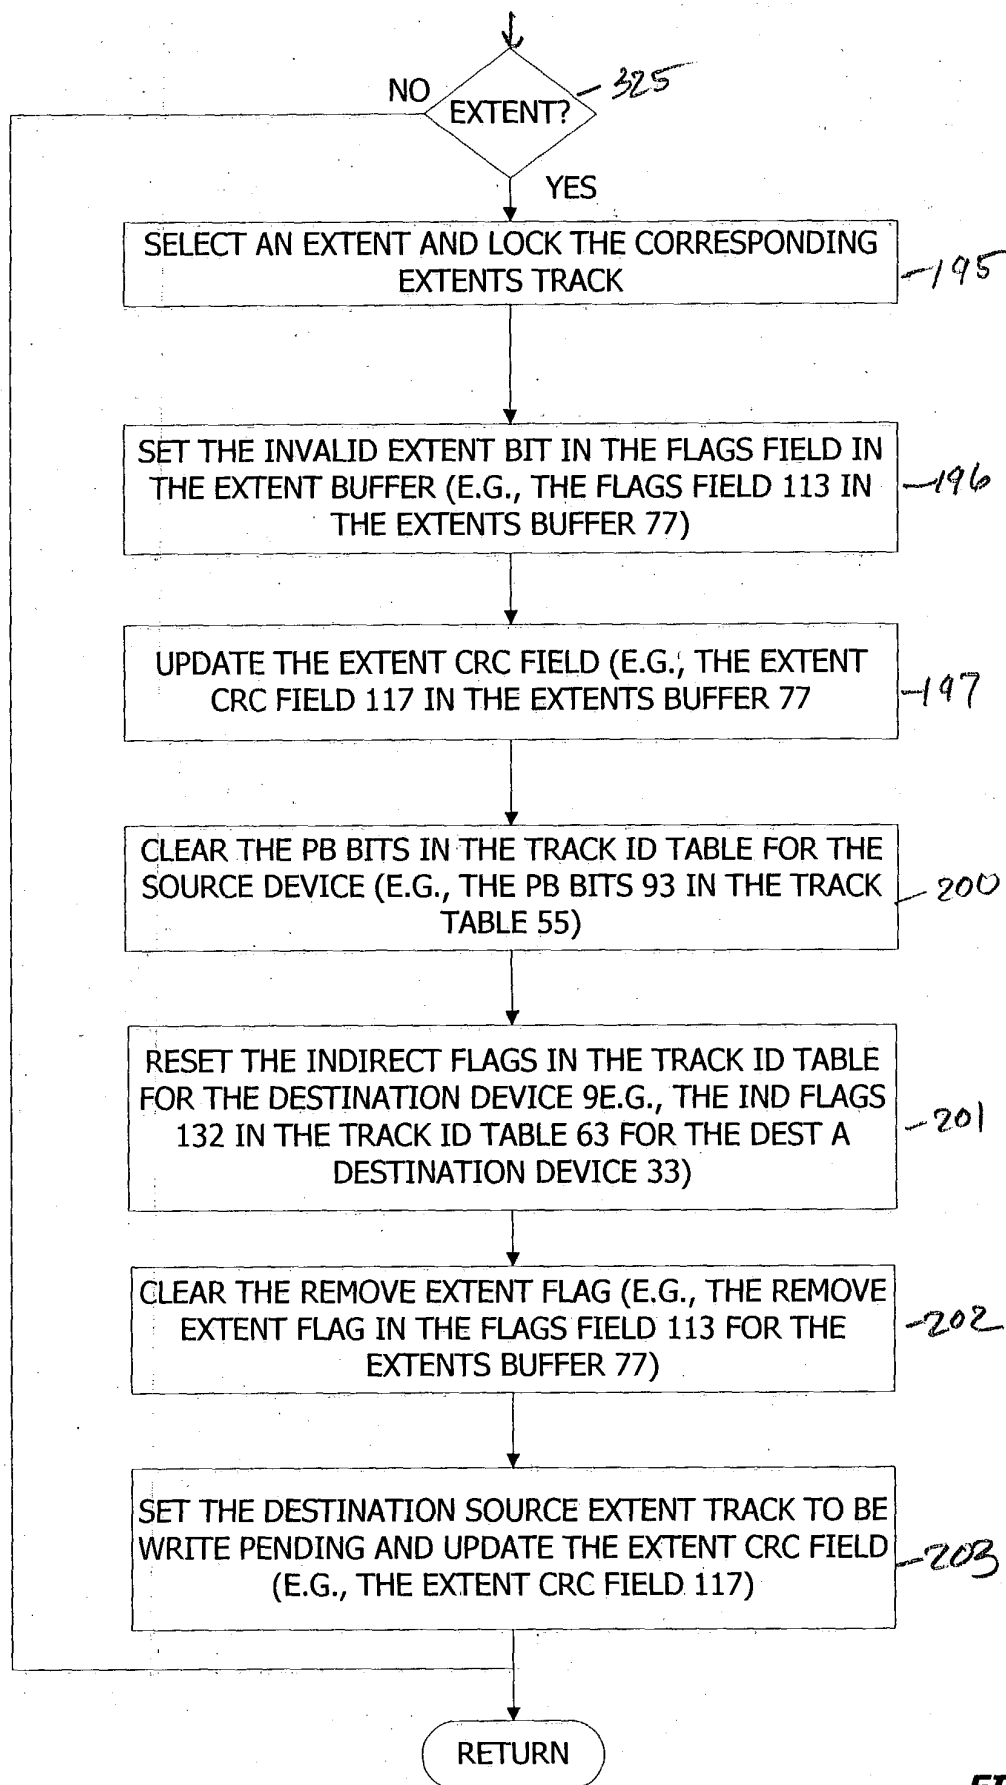


FIG. 12

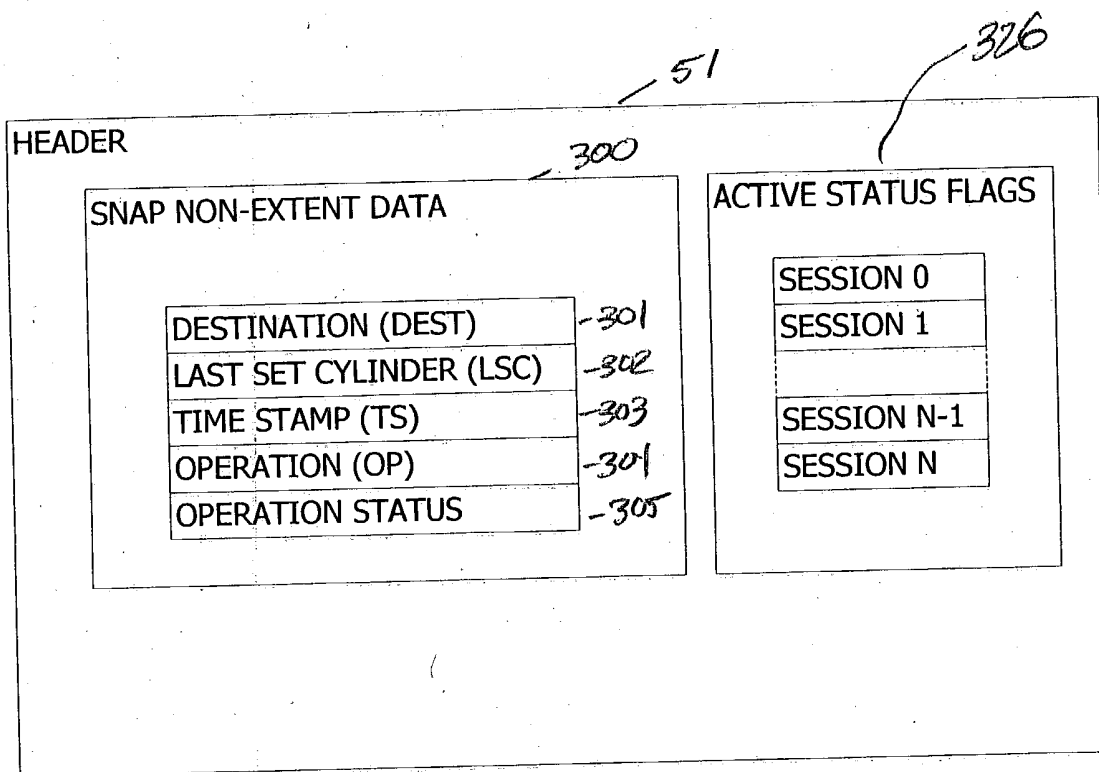


FIG. 13

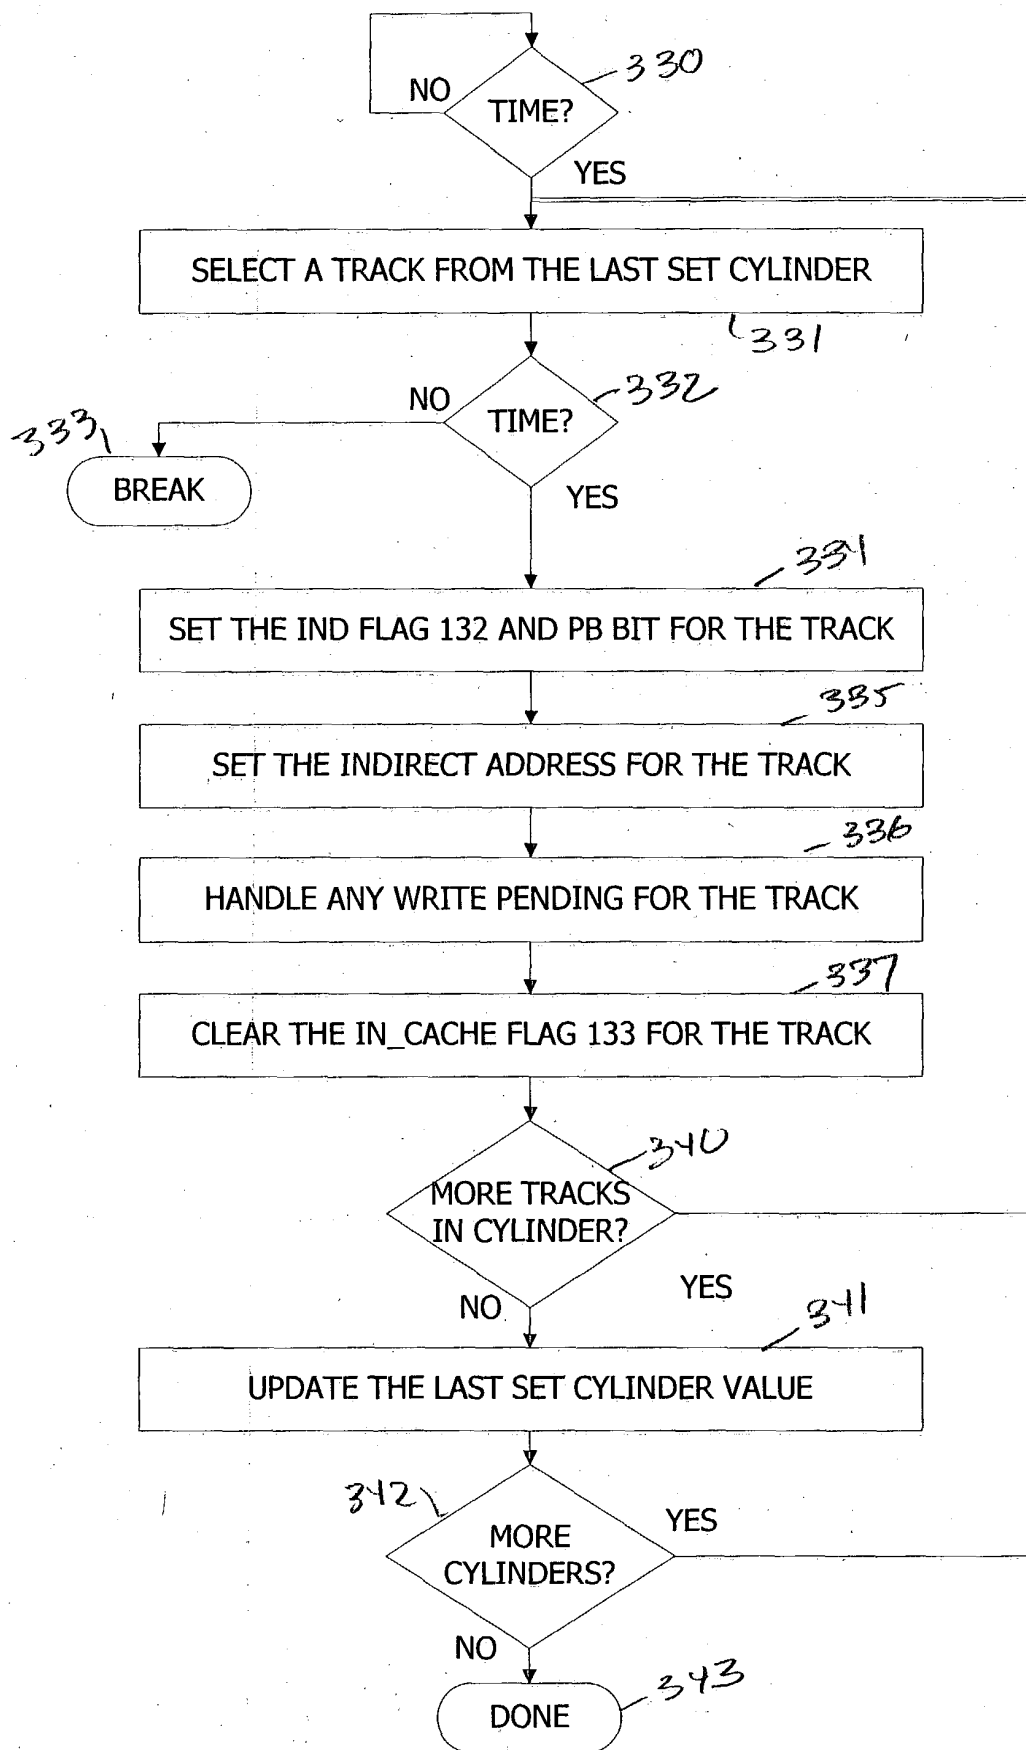


FIG. 14

REQUESTING HOST APPLICATION

DATA STORAGE FACILITY 24

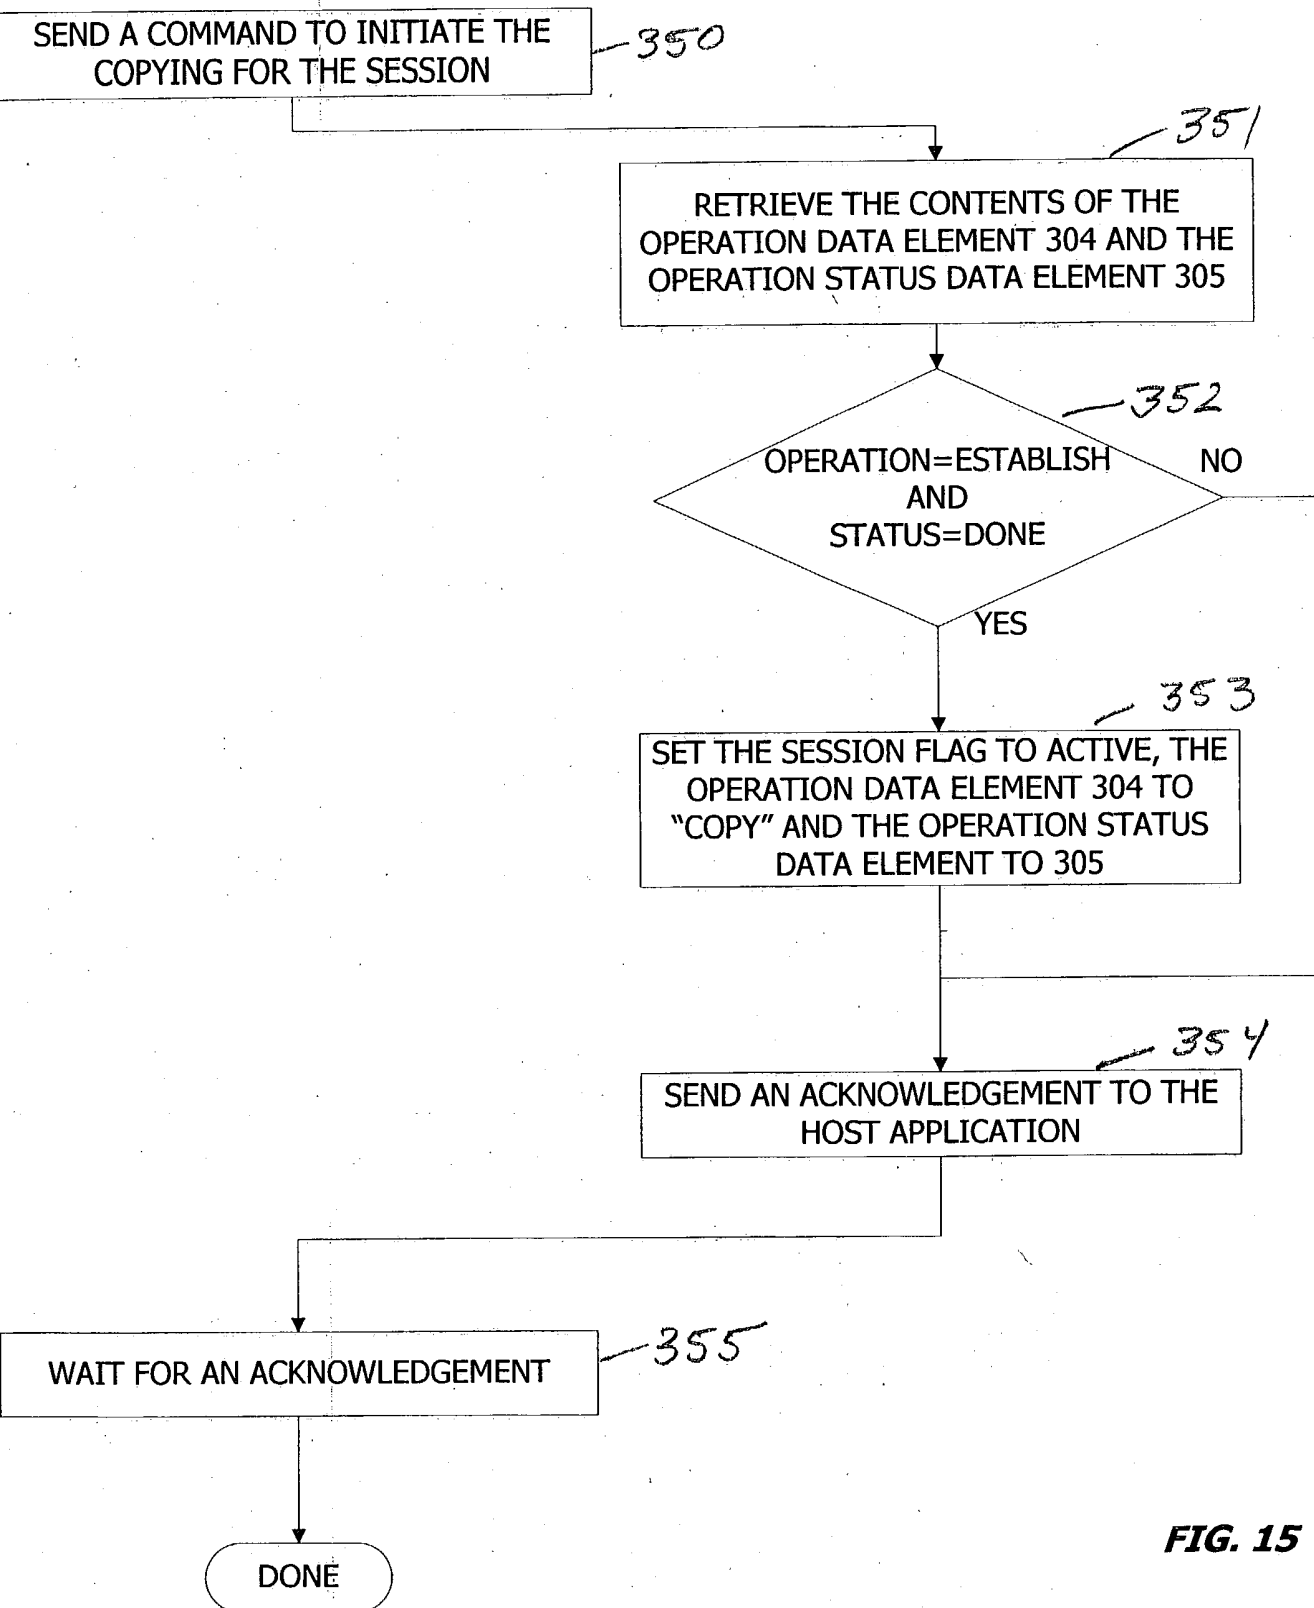


FIG. 15